

© 2014 Auluxe Corporation All Right Reserved.  
www.AuluxeAcoustic.com

This manual may not be reproduced, distributed, modified or posted to  
websites without the express written permission of Auluxe Corporation.



Designed in Germany. Printed in P.R.C.

 Auluxe®

# New Casa

AW2020 / Wireless Music System

 
## 無線數位音樂系統

 
 
 
使用說明書 / 使用说明书 / 取扱説明書

## Instruction Manual

\*Made for iPod, iPhone\* 表示電子配件專為連接 iPod, iPhone 所設計，且經開發人員認證符合 Apple 效能標準。  
iPod, iPhone 是蘋果電腦公司在美國及其他國家的註冊商標。

\*Made for iPod, iPhone\* means that an electronic accessory has been designed to connect specifically to iPod, iPhone and has been certified by the developer to meet Apple performance standards.  
iPod, iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.



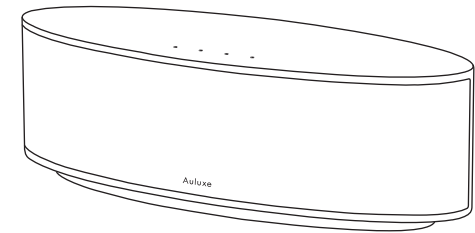

### Auluxe New Casa

 
 
Operating voltage : 100 - 240V AC / 50 - 60 Hz

Rated output power : Total 30 Watts

Frequency Range : 40-20,000 Hz


Dimensions (WxDxH) : 401 x 130 x 138 mm

Weight : 3.5 kg / 7.72 lb



1


## 功能操作說明

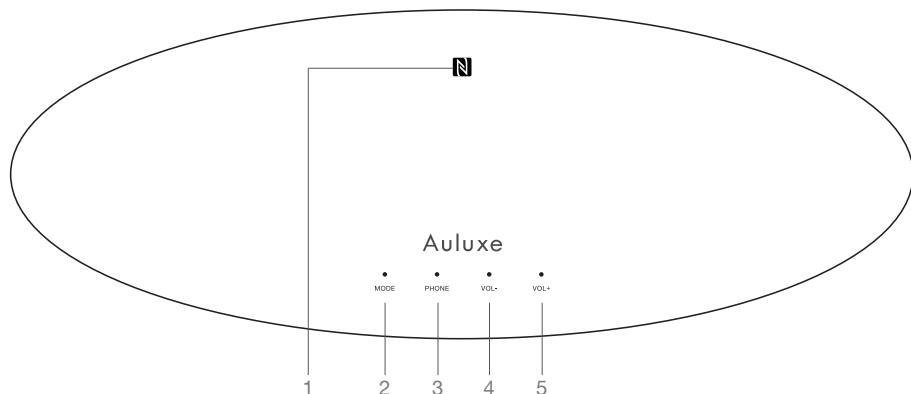 

項目	名稱	說明
1	NFC	支援 NFC 技術。支援任一模式下操作此功能，將手持裝置的 NFC 感應位置，靠近 New Casa 機身上方的 NFC 標籤區域之感應接收位置 1-5 秒，即可自動使用藍牙播放音樂。
2	MODE	輕觸此鍵可切換Bluetooth模式及AUX in 外接音源線模式。藍色LED燈號表示Bluetooth模式；白色LED燈號表示AUX in模式。
3	PHONE	Hands-Free. 藍牙模式時當有手機來電，輕按一下可進入免持聽筒功能，在擴音狀態下進行對話。(再按一下即可結束通話)
4	VOL-	播放音樂及免持聽筒時可調降音量，調整時LED燈會閃爍，當調降至極小聲時，LED燈顯示恆亮。
5	VOL+	播放音樂及免持聽筒時可調升音量，調整時LED燈會閃爍，當調升至極大聲時，LED燈顯示恆亮。


2

## 功能操作說明

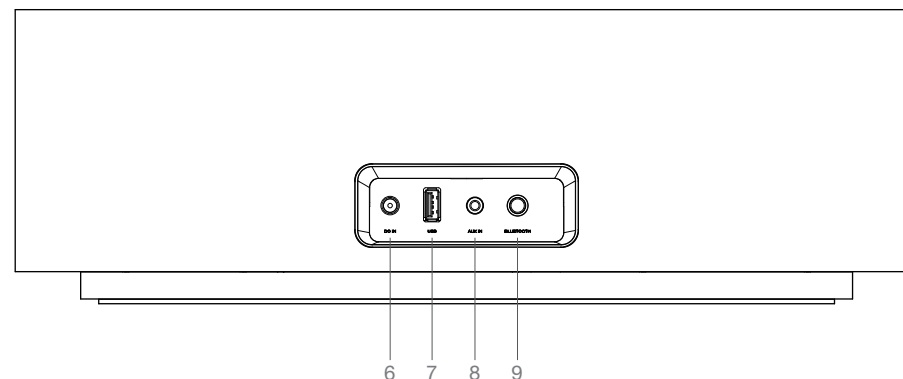 


項目	名稱	說明
6	DC IN	電源輸入DC 24V  2.5A，連接電源線至音響系統後方此孔即可開機。
7	USB	可供 iPod / iPhone / iPad / Android 手持式裝置充電之用途。
8	AUX IN	連接3.5mm音源線至音響系統後方此孔，另一端則與您的桌上型電腦、筆記型電腦及其他音樂播放器的耳機輸出孔連結。(如藉由藍牙播放音樂則無需再連結音源線)
9	BLUETOOTH	當要換不同的音樂播放裝置時，按此藍牙重新配對鍵，可斷掉原本連接的播放器，重新配對另一裝置。  在手持式裝置上的搜索名稱為AW2020，在藍牙配對連結時，面板LED指示燈會以閃爍藍燈方式呈現。

## Getting to know your product

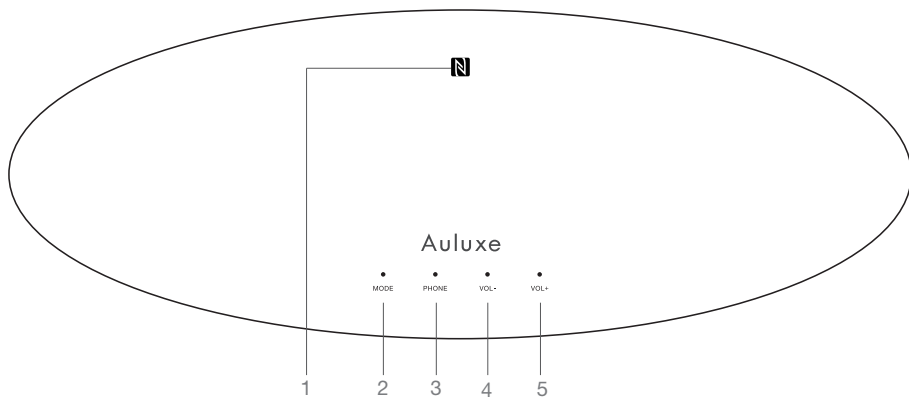 

Item	Name	Description
1	NFC	Support NFC connect. No need to switch back to Mode selection, Easily place any NFC enable device onto New Casa NFC tag for 1-5 seconds. Start to enjoy music stream via Bluetooth function.
2	MODE	Gentle touch to switch from Bluetooth pairing or AUX in music source. Blue light on LED indicates Bluetooth mode. White light on LED indicated AUX in mode.
3	PHONE	Hand free calling profile. Under Bluetooth connection, gentle click this button to pause what is playing and switch to pick up hands free incoming calls. (Another click to end phone call)
4	VOL-	Adjusting softer/stronger volume level for music and hand free calls.
5	VOL+	LED indication light flashes while tuning and light stays on at the heaviest volume.

## Buttons

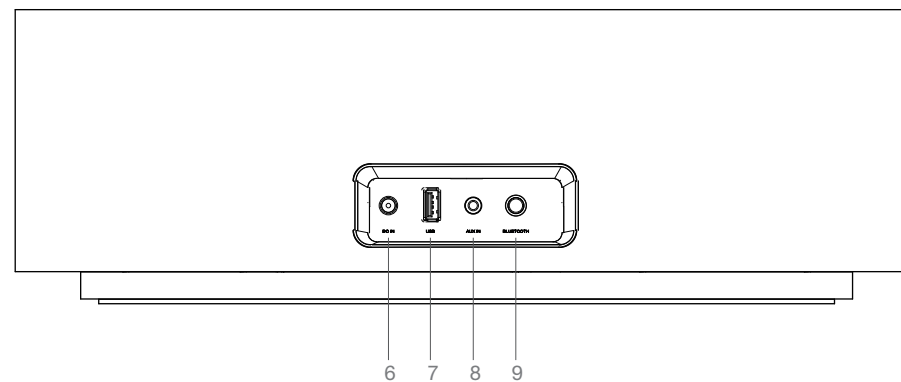 

Item	Name	Description
6	DC IN	Power charging supply DC 24V---2.5A, connect adaptor to this port and ready to use New CASA.
7	USB	Additional Power bank for iPod/iPhone/iPad/Android.
8	AUX IN	Connect 3.5mm wire to this audio-in jack, the other end to Desktop, laptop or headphone jack on all music device. (No cord is needed for Bluetooth streaming )
9	BLUETOOTH	Click this for re-pairing another Bluetooth music source. New Casa disconnects origin device and auto connect to the other. Blue LED light flashes during searching and name shown on your device is AW2020.