



Auluxe

Pure Audio Luxury

New Casa

AW2020 / Wireless Music System

Instruction Manual

사용 설명서

Technical data



Operating Voltage :
100-240V AC / 50-60 Hz

Rated Output Power :
Total 30 Watts

Frequency Range :
40Hz-20KHz

Dimensions (W x D x H) :
401 x 130 x 138 mm

Weight :
3.5 kg / 7.72 lb

Important Safety Instruction

To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

01. Read these instructions.
02. Keep these instructions.
03. Heed all warnings.
04. Follow all instructions.
05. **WARNING** – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
06. Clean only with a dry cloth.
07. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
08. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.


09. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Operate this product only from the type of power source indicated on the back panel. For products using an external power supply, use an exact replacement if lost or damaged. For products operating from battery power, refer to the user manual.
16. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled or objects have fallen into the product.
 - c. If the product has been exposed to water or rain.
 - d. If the product does not operate normally by following the operating instructions.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinctive change in performance.
17. Keep this product a safe distance away from naked flame, such as a lit candle.
18. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
19. When replacement parts are required, be sure your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Upon completion of any service, ask the service technician to perform safety checks to confirm the product is in proper operating condition.
21. The recommended operating temperature range is 5°C to 40°C (41°F – 104°F).
22. **WARNING** – The mains are not disconnected in the off position, but the circuits are de-powered.
23. The power cord plug serves as the disconnect device and should remain readily accessible.



This product can be recycled. Products bearing this symbol must NOT be thrown away with normal household waste.

At the end of the product's life, take it to a collection point designated for recycling of electrical and electronic devices. Find out more about return and collection points through your local authority. The European Waste Electrical and Electronic Equipment (WEEE) Directive was implemented to dramatically reduce the amount of waste going to landfills, thereby reducing the environmental impact on the planet and on human health. Please act responsibly by recycling used products. If this product is still usable, consider giving it away or selling it.

Getting to know your product


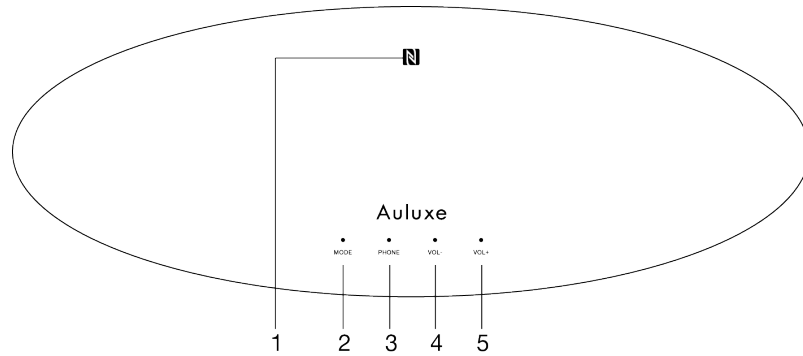


Auluxe



Item	Name	Description
1	NFC	Support NFC connect. No need to switch back to Mode selection, Easily place any NFC enable device onto New Casa NFC tag for 1-5 seconds. Start to enjoy music stream via Bluetooth function.
2	MODE	Gentle touch to switch from Bluetooth pairing or AUX in music source. Blue light on LED indicates Bluetooth mode. White light on LED indicated AUX in mode.
3	PHONE	Hand free calling profile. Under Bluetooth connection, gentle click this button to pause what is playing and switch to pick up hands free incoming calls. (Another click to end phone call)
4	VOL-	To decrease volume.
5	VOL+	To increase volume.

Buttons

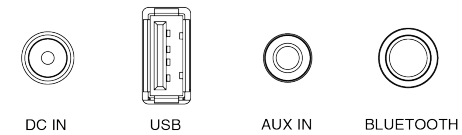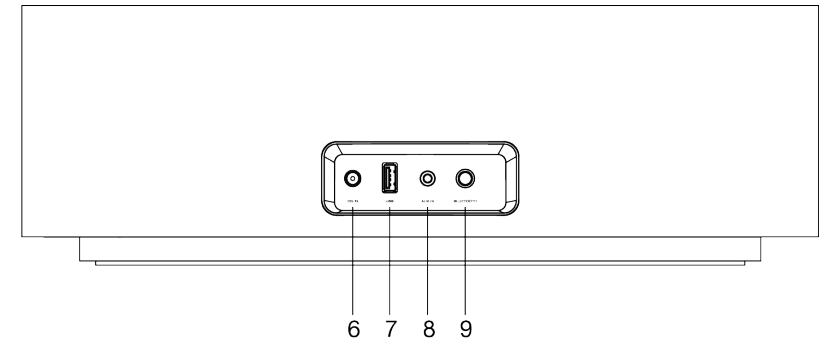

Item	Name	Description
6	DC IN	Power charging supply DC 24V---2.5A, connect adaptor to this port and ready to use New Casa.
7	USB	Additional Power bank for iPod/iPhone/iPad/Android.
8	AUX IN	Connect 3.5mm wire to this audio-in jack, the other end to desktop, laptop or headphone jack on all music device. (No cord is needed for Bluetooth streaming)
9	BLUETOOTH	Press the Bluetooth button to re-set and pair connection. New Casa disconnects origin device and auto connect to the other. Blue LED light flashes during searching and name shown on your device is New Casa.

제품사양



동작 전압 :
100~240V AC / 50~60 Hz

정격 출력 :
Total 30 Watts

주파수 범위 :
40Hz~20KHz

크기 (W x D x H) :
401 x 130 x 138 mm

중량 :
3.5 kg / 7.72 lb

중요 안전 수칙

최고의 성능을 위해 본 설명서를 주의 깊게 읽어주십시오. 상시 사용할 수 있도록 안전한 장소에 보관하십시오.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


1. 본 설명서를 읽어 보세요.
2. 본 설명서를 보관하세요.
3. 모든 경고문에 유의하세요.
4. 모든 지침을 따르세요.
5. 경고 - 화재 및 감전의 위험을 줄이기 위하여 본 기구를 습기에 노출시키지 마세요.
6. 마른 헝겊으로만 닦아주세요.
7. 통풍구를 막지 마세요. 제조업체의 설명서에 따라 설치하세요.
8. 라디에이터, 난방 기구, 스토브 또는 기타 기구와 같은 열을 발생시키는 열원 근처에 설치하지 마세요 (증폭기 포함).

9. 안전을 위해 만들어진 유극 또는 접지형 플러그를 훼손하지 마세요. 유극 플러그는 서로 다른 폭을 가진 두 개의 날을 가지고 있습니다. 접지형 플러그는 두 개의 날과 한 개의 접지 단자가 있습니다. 넓은 날과 세 번째 접지 단자는 안전을 위해 제공된 것입니다. 만약 제공된 플러그가 고객님의 콘센트와 맞지 않을 경우 전기기술자와 상담하여 구식 콘센트를 교체하세요.
10. 특히 기구에서 나오는 부분의 플러그나 콘센트 부분이 밟히거나 끼지 않도록 보호하세요.
11. 제조업체가 명시한 부속품 / 액세서리만 사용하세요.
12. 제조업체가 명시한 카트, 스탠드, 삼각대, 브라켓 또는 테이블만 사용하고 기구와 함께 판매 될 수 있습니다. 카트 사용시 카트 / 장비가 함께 넘어질 수 있으므로 부상을 입지 않도록 주의해 주세요.
13. 번개가 치거나 장기간 미사용시 장치의 플러그를 빼주세요.
14. 모든 서비스는 인증된 서비스 직원에게 의뢰하세요. 전원코드 또는 플러그가 손상되거나 액체 또는 물체가 장치에 떨어지거나 비 또는 습기에 노출로 인해 장치가 손상되어 정상 작동되지 않는 경우 서비스가 필요합니다.
15. 뒷판에 표시된 전력원에 해당하는 유형에서만 제품을 작동하세요. 외부 전원 공급 장치를 사용하는 제품의 경우 분실되거나 손상된 경우 정확한 교체품을 사용해 주세요. 배터리 전원을 통한 작동은 사용 설명서를 참조하세요.
16. 다음 조건에서는 벽면 콘센트에서 본 제품의 플러그를 뽑은 후 인증된 서비스 직원에게 서비스를 의뢰해 주세요 :
 - a. 전원 코드 또는 플러그가 손상된 경우.
 - b. 액체가 쏟아졌거나 물체가 제품에 떨어졌을 때.
 - c. 제품이 물 또는 비에 노출되었을 때.
 - d. 제품이 작동 설명서에 따라 정상적으로 작동하지 않는 경우.
 - e. 제품이 떨어지거나 손상을 입은 경우.
 - f. 제품이 성능에 큰 변화를 보이는 경우.
17. 본 제품은 촛불과 같은 화기에서 멀리 떨어진 안전한 곳에 두세요.
18. 기구는 튀거나 떨어뜨리는 안되며 액체로 채워진 화분과 같은 물건을 기구 위에 올려 놓지 않아야 합니다.
19. 부품 교체 시 서비스 기술자가 제조업체가 지정한 교체품 또는 원래 부품과 동일한 특성을 가지고 있는 부품을 사용하는지 확인하세요. 승인되지 않은 교체는 화재, 감전, 기타 위험을 초래할 수 있습니다.
20. 서비스 완료 시 서비스 기술자에게 제품이 올바른 작동 상태를 확인하세요.
21. 권장 작동 온도 범위는 5°C - 40°C (41°F - 104°F) 입니다.
22. 경고 - 주요장치는 꺼짐 상태에서도 꺼지지 않지만 회로는 꺼집니다.
23. 전원 코드 플러그는 차단 장치 역할을 하므로 접근하기 쉽게 유지해야 합니다.



본 제품은 재활용할 수 있습니다. 이 기구가 부착된 제품은 일반 가정 쓰레기와 함께 버릴 수 없습니다.



제품의 수명이 끝나면 전기 전자 기기의 재활용을 위하여 지정된 취급소로 가져가십시오. 반환 및 취급소에 대한 자세한 사항은 지방당국을 통해 알아보시기 바랍니다. 유럽 전자전기장비폐기 (WEEE) 지침은 토양 폐기물의 양을 획기적으로 감소시킴으로써 지구 및 인체 건강에 영향을 미치는 환경 영향을 줄이기 위해 시행되었습니다. 중고 제품의 재활용을 통해 책임감 있게 행동하십시오. 아직 사용할 수 있다면 기부하거나 판매를 고려해 보십시오.

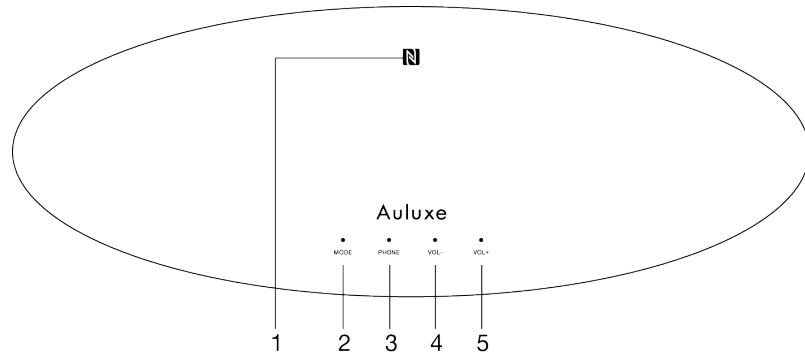

Auluxe

● MODE ● PHONE ● VOL- ● VOL+

항목	이름	설명
1	NFC	NFC 연결 지원. Mode 선택으로 되돌아갈 필요가 없습니다. NFC 사용 가능한 장치를 New Casa NFC 표시에 1-5 초간 놓아둡니다. 블루투스 기능을 통해 음악을 재생합니다.
2	MODE	블루투스 연결 또는 AUX 음원으로부터 전환됩니다.
3	PHONE	Hand 핸즈 프리 통화 표시. 블루투스 연결 상태에서 이 버튼을 살짝 누르면 재생이 일시 중지되고 전화가 수신됩니다. (한번 더 누르면 통화 종료)
4	VOL-	음량 감소
5	VOL+	음량 증가.

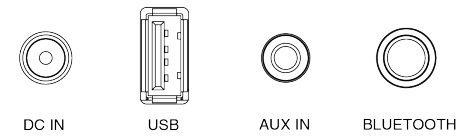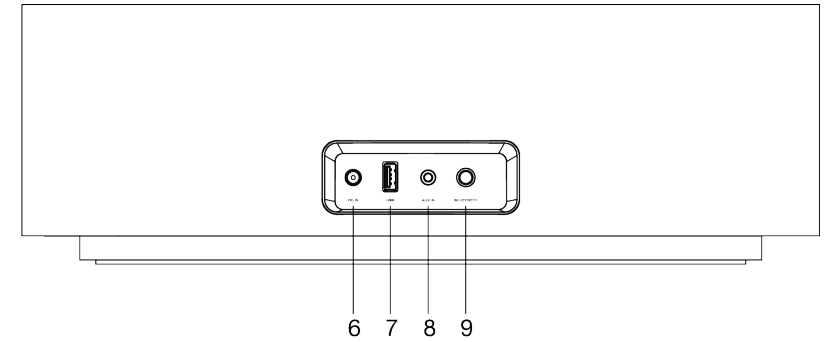

항목	이름	설명
6	DC IN	Power DC 24V---2.5A 의 전원 공급 어댑터를 포트에 연결하면 New Casa 를 사용할 수 있습니다.
7	USB	iPod / iPhone/iPad/Android 용 추가 배터리.
8	AUX IN	3.5mm 전선을 오디오 입력 잭에 연결하고, 다른 쪽 끝을 데스크탑, 노트북 또는 헤드폰 잭에 연결하십시오. (블루투스 재생시 코드 필요 없음)
9	BLUETOOTH	Bluetooth 버튼을 눌러 연결을 재설정할 수 있습니다. New Casa 는 원래 장치 연결을 해제하고 다른 장치와 자동 연결합니다. 검색하는 동안 파란색 LED 표시등이 깜빡이며 고객님의 기기에 New Casa 로 표시됩니다.


AuluxeAcoustic.com

© 2017 Auluxe Corporation All Right Reserved.



This manual may not be reproduced, distributed, modified or posted to Websites without the express written permission of Auluxe Corporation.

Designed and engineered by Auluxe
Printed in China

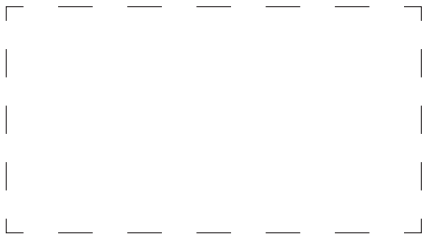

Retailer store stamp for guarantee certificate.

구입하신 영수증과 정품인증 스티커를 반드시 여기에 부착하여 주십시오 .